

DEVICE CODES FOR PROGRAMMING THE REMOTE

These tables contain the manufacturer codes for programming the remote to control your TV, VCR, DVD player, or audio amplifier. Every attempt has been made to include all codes. If your device brand is not listed or if the codes do not work, the remote may not control your device. In some cases codes may operate some but not all buttons shown in this guide.

TV Codes

Programming in AUX mode:

Press 0 before entering the TV code.

A Mark	670
Action	662
Admiral	521, 605, 668, 669, 675
Aiko	727
Aiwa	751
Akai	570, 573, 659, 660
A-Mark	620
Amtron	657
Anam National	509, 541, 620, 651, 657, 661, 663, 698
AOC	505, 506, 519, 520, 573, 620, 627, 652, 653, 654, 659, 664, 665, 670, 672
Apex	743, 744, 745
Archer	620
Audiovox	620, 657, 662, 672
Bell & Howell	590, 669, 675
Broksonic	752, 659, 661, 748
Capehart	519, 627
Citizen	506, 516, 523, 524, 525, 526, 590, 652, 654, 657, 658, 680, 727
Classic	659
Colortyme	573, 627, 652, 654, 660, 667, 668, 671, 674, 679
Contec/Cony	541, 655, 657, 661, 662, 726
Craig	536, 541, 657, 661, 662, 666, 667, 694
Crown	526, 536, 657, 666, 670
Curtis Mathes	506, 516, 526, 573, 590, 641, 645, 650, 652, 654, 658, 659, 660, 664, 665, 667, 668, 670, 674, 680, 703, 708
Daewoo	505, 524, 526, 529, 530, 531, 573, 652, 653, 654, 658, 659, 663, 664, 665, 670, 672, 674, 684, 698, 719, 727
Daytron	526, 627, 652, 654, 658, 665, 670, 672
Dimensia	645, 650
DISH Network	742
Dixi	566, 620
Dumont	501, 627, 652
Echostar	722
Electrohome	526, 573, 651, 652, 654, 656, 659, 660, 665, 670, 709, 728
Emerson	526, 534, 536, 541, 573, 590, 627, 636, 642, 648, 652, 654, 655, 657, 658, 659, 660, 661, 662, 665, 666, 667, 669, 670, 677, 679, 682, 692, 696, 699, 720
Envision	506, 573, 652, 654, 660, 664
Fisher	542, 590, 683
Fujitsu	534, 682, 694
Funai	534, 541, 657, 661, 662, 677, 682, 694
GE	508, 509, 543, 544, 630, 645, 646, 650, 651, 652, 654, 659, 661, 663, 665, 667, 668, 670, 673, 676, 690, 691, 698, 701, 715, 716, 725, 728, 742
Goldstar	505, 523, 526, 545, 546, 566, 573, 652, 653, 654, 655, 656, 658, 659, 660, 664, 665, 670, 671, 693, 730, 747
Gradiente	660, 671

Granada	627, 670, 671
Grundig	670, 673
Hallmark	627, 652, 654, 659
Harman Kardon	561, 659
Hinari	534
Hitachi	523, 526, 548, 549, 553, 554, 555, 585, 597, 626, 636, 638, 643, 648, 652, 654, 655, 665, 668, 669, 670, 672, 673, 702, 718, 726
Infinity	666, 671
JBL	566, 671
JC Penney	505, 506, 516, 525, 526, 543, 546, 631, 645, 646, 650, 652, 653, 654, 658, 659, 664, 667, 668, 670, 673, 676, 680, 690, 691, 701, 725, 726, 728, 730
Jensen	556, 573, 652, 654, 660
JVC	508, 557, 559, 642, 649, 655, 667, 673, 676, 726, 735, 736, 737
Kawasho	548, 561, 573, 652, 654, 664
Kenwood	506, 573, 652, 654, 656, 659, 660, 664, 679
Kloss Novabeam	657, 663, 698, 723, 724
Konka	753
KTV	526, 541, 573, 657, 658, 661, 662, 664, 665, 670, 696,
Lloyds	627, 679
Loewe	566
Logik	675
Luxman	523, 652, 654,
LXI	563, 566, 590, 595, 667, 631, 635, 645, 646, 650, 654, 659, 668, 683, 691, 701, 725
Magnasonic	573, 659, 660, 669, 672, 677
Magnavox	506, 520, 525, 536, 566, 567, 568, 573, 610, 652, 654, 656, 659, 660, 664, 665, 666, 669, 671, 673, 674, 677, 723, 724, 729
Majestic	675
Marantz	506, 566, 573, 652, 654, 660, 664, 665, 671
Megatron	627, 654
Memorex	590, 627, 653, 654, 659, 675, 720
MGA	504, 505, 506, 542, 571, 573, 627, 652, 653, 654, 656, 660, 728
Mitsubishi	504, 505, 542, 570, 571, 572, 573, 597, 623, 627, 652, 653, 654, 656, 659, 660, 664, 664, 665, 670, 671, 705, 728
Montgomery Ward	675
Motorola	521, 605, 651
MTC	505, 506, 516, 523, 573, 627, 652, 653, 654, 659, 664, 667, 672, 680
Multitech	657
NAD	502, 617, 627, 631, 635, 637, 654
National	509
NEC	505, 506, 507, 517, 523, 573, 627, 651, 652, 653, 654, 660, 664, 665, 679, 731, 732
Nikkai	612
Nikko	654, 672, 727
Orwa	541, 657, 661
Optimus	637

Optonica	521, 605, 607
Orion	694
Osaki	612
Panasonic	508, 509, 512, 566, 644, 651, 662, 663, 668, 672, 673, 676, 685, 689, 698, 700, 716, 234, 247
Philco	505, 506, 525, 536, 568, 573, 610, 651, 652, 653, 654, 655, 656, 659, 660, 664, 665, 666, 669, 671, 672, 674, 677, 723, 724, 729
Philips	525, 566, 651, 652, 655, 656, 671, 690, 723, 724, 729
Pioneer	502, 548, 576, 636, 637, 648, 652, 654, 663, 665, 708
Portland	505, 526, 573, 652, 654, 658, 659, 664, 665, 670, 727
Price Club	680
Prism	676
Proscan	645, 646, 650, 668, 691, 725, 742
Proton	513, 519, 526, 536, 585, 627, 652, 654, 655, 659, 660, 665, 666, 668, 670
Quasar	508, 509, 651, 663, 673, 676, 698, 700, 747
Radio Shack/Realistic	526, 541, 590, 607, 612, 645, 650, 652, 654, 655, 657, 658, 661, 662, 663, 668, 670, 683, 698, 730
RCA	503, 505, 548, 630, 633, 634, 636, 641, 645, 646, 648, 650, 651, 652, 653, 654, 656, 661, 663, 665, 667, 668, 670, 691, 698, 701, 708, 715, 716, 725, 742, 749
Realistic	590, 645
Runco	501
Sampo	506, 519, 652, 654, 658, 663, 664, 665, 698, 730, 746
Samsung	505, 506, 516, 523, 526, 566, 573, 612, 627, 647, 652, 653, 654, 655, 656, 658, 659, 664, 665, 667, 669, 670, 679, 680, 704, 717, 730, 738
Sansui	754
Sanyo	542, 590, 652, 683
SBR	566
Schneider	566
Scott	526, 534, 541, 600, 652, 654, 655, 657, 661, 662, 665, 670, 677, 682, 696, 701
Sears	523, 534, 542, 563, 590, 595, 601, 604, 617, 627, 631, 635, 645, 646, 650, 652, 654, 656, 659, 661, 668, 670, 682, 683, 688, 691, 703, 725, 726
Sharp	521, 526, 585, 605, 607, 628, 629, 652, 654, 655, 658, 669, 670, 674, 679, 739, 740, 741
Signature	675
Solavox	612
Sony	500, 578, 640, 670, 690
Soundesign	525, 536, 541, 627, 652, 654, 657, 659, 661, 665, 666, 682
Starlite	657
Supra	523
Sylvania	506, 525, 536, 566, 568, 569, 573, 600, 610, 652, 654, 656,

User Guide

DEVICE CODES FOR PROGRAMMING THE REMOTE

	659, 660, 664, 665, 666, 671, 672, 674, 677, 723, 724, 729, 733
Symphonic	632, 657, 662, 677, 692, 694
Tandy	521, 605
Tatung	509, 651, 663, 698
Technics	508, 673, 676
Techwood	523, 573, 652, 654, 660, 676
Teknika	504, 505, 512, 516, 523, 524, 525, 526, 534, 536, 541, 573, 644, 652, 653, 654, 655, 657, 658, 661, 662, 664, 665, 666, 670, 672, 675, 680, 682, 685, 726, 727
Telefunken	679
Toshiba	516, 590, 617, 631, 635, 667, 680, 683, 688, 750
Totelevision	526, 658, 668
Ultra	672
Universal	543, 690
Vector Research	506
Video Concepts	570, 661
Wards	536, 573, 607, 645, 650, 652, 653, 654, 656, 659, 664, 665, 666, 667, 668, 669, 674, 675, 677, 682, 690, 715, 723, 724, 729
White Westinghouse	659, 664, 670, 672, 674
Yamaha	505, 506, 573, 652, 653, 654, 656, 664, 666, 672, 679

VCR Codes

Programming in AUX mode:

Press 1 before entering the VCR code.

Aiwa	588, 622, 623
Akai	513, 514, 515, 516, 517, 518, 520, 568, 682
Alba	546
Amstrad	588
ASA	556
Audiovox	676
Bell & Howell	581
Broksonic	559, 748
Bush	589
Calix	676
Canon	554, 678, 679
Capehart	546
CCE	681
Citizen	534, 591, 592, 594, 675, 676, 677
Colorlyme	592
Craig	591, 658, 675, 676, 681, 685
Curtis Mathes	554, 592, 594, 605, 607, 675, 677, 678, 679, 683
Daewoo	506, 534, 546, 547, 559, 588
Daytron	546
Denon	686
Dimensia	607
Dumont	549
Electrohome	512, 676
Emerson	505, 506, 508, 509, 511, 512, 534, 559, 568, 588, 590, 618, 676, 678
Finlandia	549
Finlux	549, 556, 588
Fisher	548, 549, 581, 584, 588, 608, 610
Fuji	678
Funai	588

Garrard	588
GE	550, 551, 552, 554, 572, 591, 605, 607, 675, 678, 679
Go Video	557, 558, 620, 685
Goldstar	592, 594, 676, 747
Goodmans	585, 589
Gradiente	588
Granada	549, 581
Grundig	556
Harman Kardon	568, 592
Harwood	681
Hinari	589
Hitachi	536, 538, 539, 540, 588, 595, 597, 680, 682, 686
ITT	518
JC Penney	554, 581, 591, 592, 594, 595, 600, 674, 675, 676, 678, 679, 680, 681, 685, 686
Jensen	595, 680, 682
JVC	561, 562, 563, 581, 592, 594, 600, 674, 682, 686
Kenwood	562, 581, 592, 594, 600, 674, 677, 682, 683
KLH	681
Kodak	676, 678
Lloyds	683
Logik	589, 681, 685
Luxor	518
LXI	676
Magnasonic	685
Magnavox	527, 533, 554, 556, 678, 679, 685
Marantz	554, 556, 581, 585, 592, 594, 600, 602, 674, 677, 678, 683
Matsushita	678
Memorex	507, 533, 549, 554, 566, 581, 585, 588, 608, 675, 676, 678, 686, 687
MGA	512, 567, 568
Minolta	595, 680, 686
Mitsubishi	512, 562, 567, 568, 570, 571, 595, 680
Motorola	678
MTC	544, 588, 675, 685
Multitech	579, 588, 675, 677, 681
NAD	573
NEC	562, 581, 592, 594, 600, 602, 674, 677, 682, 683
Nikko	676
Noblex	675
Olympus	678
Optimus	676
Optonica	585
Orion	506
Panasonic	523, 554, 598, 614, 628, 633, 678, 679, 685, 747
Pentax	592, 595, 677, 680, 683, 686
Pentax Research	594
Perdio	588
Philco	554, 678, 679, 686
Philips	554, 556, 585, 678
Pioneer	562, 573, 574, 575, 576, 600, 674, 680
Portland	546, 677
Proscan	605, 607
Proton	685
Quasar	554, 678, 679, 747
Radio Shack	512, 607, 608, 610
Radio Shack/Realistic	581, 584, 588, 608, 675, 676, 678, 679

Radix	676
RCA	518, 525, 527, 528, 591, 595, 605, 607, 615, 631, 649, 675, 678, 680, 686
Realistic	534, 549, 554, 581, 584, 585, 588, 608, 675, 678, 679
Ricoh	502
Runco	533
Saisho	506
Salora	567, 581
Samsung	515, 517, 534, 579, 591, 675
Sansui	544, 562, 600, 674, 682, 685
Sanyo	549, 581, 582, 583, 608, 675
SBR	556
Schneider	589
Scott	508, 534, 559, 590
Sears	548, 549, 581, 584, 595, 608, 610, 676, 678, 680, 683, 686
Senra	546
Sharp	512, 585, 607, 625
Shintom	589, 595, 681, 685
Singer	678, 681, 685
Sony	500, 501, 502, 504
STS	678
Sylvania	554, 556, 567, 588, 678, 679
Symphonic	588, 594, 683
Tandy	581, 588
Tashiko	588, 676
Tatung	594, 682
Teac	588, 594, 682
Technics	554, 633, 678
Teknika	554, 588, 676, 678
Toshiba	534, 535, 567, 584, 590, 680
Totelevision	591, 675, 676
Unitech	675
Vector Research	534, 592, 600, 674, 677, 683
Video Concepts	534, 568, 592, 600, 674, 677, 683
Wards	534, 588, 595, 608, 675, 676, 678, 680, 681
XR-1000	588, 678, 681
Yamaha	581, 592, 594, 600, 674, 682, 683
Zenith	500, 501, 533, 747

TV/VCR Combo

Programming for combination devices:

Program the remote control in TV mode and then in VCR mode.

Broksonic	748
Goldstar	747
Panasonic	747
Quasar	747
Zenith	747

DEVICE CODES FOR PROGRAMMING THE REMOTE

DVD Player Codes

Programming in AUX mode:

Press 1 before entering the DVD code.

Aiwa	634, 694, 751
Alpine	653
Apex	654, 655, 743, 744
Broksonic	656, 752
Clarion	696
Classic	695
Daewoo	657
Denon	697, 698, 699, 700
Emerson	658, 701
Fisher	659
Funai	658
GE	702, 703
Go Video	692, 693
GPX	704
Hitachi	632, 635, 660, 705, 706, 707
JVC	636, 689, 708, 711
Konka	637, 638, 753
Koss	745
Magnavox	626, 661
Memorex	709
Mintek	710
Mitsubishi	629
NAD	701
Norcent	762
Onkyo	713
Ortron 7	23
Panasonic	639, 662, 663, 714, 715, 716, 717, 734
Philips	640, 641
Pioneer	665, 718, 719
Proscan	720
Qwestar	721, 723
RCA	627, 650, 666, 690, 742, 749
Sampo	724
Samsung	651, 652, 667, 668, 691, 740, 741
Sansui	725, 754
Sanyo	643, 726
Sharp	669, 727, 746
Sherwood	728
Sony	617, 644, 645, 670, 671, 729, 730, 731
Sylvania	658
Teac	732
Technics	733
Techwood	664
Toshiba	616, 646, 647, 672, 735, 736, 750
Yamaha	737, 738, 739
Zenith	648, 673

JVC	637, 683, 703, 725
Kenwood	649, 676, 691, 726, 728, 745
Luxman	752
Magnavox	654, 705, 740
Marantz	651, 740, 742, 743
NAD	739
Nakamichi	671, 748, 750
NEC	716, 739
Onkyo	642, 660, 662, 678
Optimus	648, 664, 734, 744, 749
Panasonic	643, 644, 652, 742, 746
Pioneer	658, 667, 668, 679, 702, 734
Proton	654, 705
Quasar	652, 742, 746
Radio Shack	744
RCA	635, 638, 704, 727
Sansui	753
Sanyo	741
Sharp	712, 713, 714, 715, 749
Sherwood	646, 670, 736, 738, 744
Sony	639, 645, 650, 687, 728, 729, 730
Teac	684, 737
Technics	643, 644, 652, 742, 746
Toshiba	710
Yamaha	663, 730, 731, 732, 733, 745, 747

DVD/VCR Combo TV/DVD

Go Video	692, 693
JVC	689
RCA	690
Samsung	667, 691

Combo Codes

Programming for combination devices:

Program the remote control in TV mode and then in VCR (or AUX - press 1 before entering the DVD code) mode.

Aiwa	751
Broksonic	752
Konka	753
Panasonic	734
RCA	749
Sansui	754
Toshiba	750

Tuner/Amplifier Codes

Programming in AUX mode:

Press 2 before entering the tuner/amplifier code.

Aiwa	636, 641, 656, 687, 718, 720, 724, 725, 726, 775
Carver	653
Citizen	709
Curtis Mathes	734
Denon	647, 674
Fisher	653, 741
GE	711
Goldstar	677, 690
Harmon Kardon	640, 672, 751
Hitachi	717, 754
JBL	640