


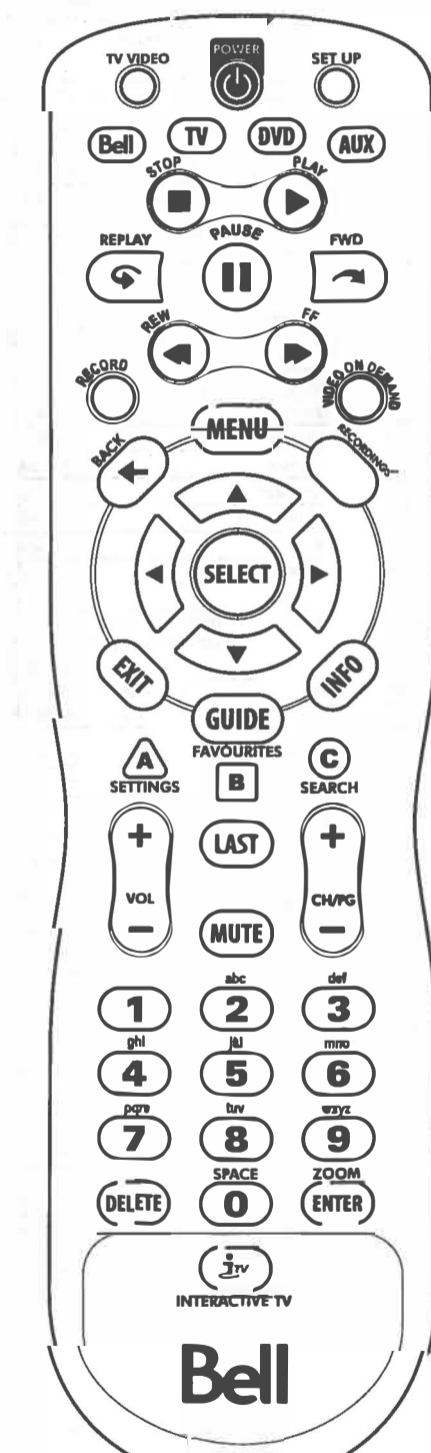

Guide de la télécommande Bell Télé Fibe™ Fibe™ TV Remote guide



Fibe est une marque de commerce de Bell Canada.

INSTALLATION DES PILES

- Retirez le couvert situé à l'arrière.
- Insérez deux nouvelles piles alcalines AA.

PROGRAMMATION DE LA TÉLÉCOMMANDE POUR CONTRÔLE R D'AUTRES APPAREILS

La télécommande contrôle uniquement l'appareil qui a été sélectionné par la touche de mode appropriée (TV, DVD et AUX). Vous n'avez pas besoin de programmer la télécommande pour contrôler votre récepteur Télé Fibe.

Pour utiliser votre télécommande avec d'autres appareils, vous devrez configurer les touches pour les modes TV, DVD et AUX afin d'être en mesure de contrôler ces appareils (section A).

Veillez vous référer à la liste des codes au verso de ce guide pour connaître le nom des marques et modèles compatibles. Si la marque de votre appareil ne se trouve pas sur la liste, consultez la section B pour découvrir la fonction de recherche.

NOTE : La touche de mode TV doit être configurée avec les codes de téléviseurs. La touche DVD doit être configurée avec les codes DVD et Blu-Ray et la touche AUX doit être configurée avec les codes Audio.

A. CONFIGUREZ LES COMMANDES DU TÉLÉVISEUR, DU LECTEUR DVD OU D'UN APPAREIL AUDIO À L'AIDE D'UNE ENTRÉE DE CODE DIRECTE

- Allumez l'appareil que vous souhaitez contrôler.
- Pour contrôler le téléviseur, appuyez sur la touche TV et appuyez ensuite sur la touche SET UP jusqu'à ce qu'elle clignote deux fois. Pour un lecteur DVD ou un appareil audio, appuyez sur la touche DVD ou AUX selon l'appareil que vous voulez configurer. Ensuite, appuyez sur la touche SET UP jusqu'à ce qu'elle clignote deux fois.
- À partir de la liste de codes située au verso de ce guide, inscrivez le premier code de la marque de votre appareil.

Problème : J'ai essayé tous les codes pour la marque de mon appareil, mais aucun ne fonctionne.
Solution : Essayez la RECHERCHE DE CODE (Section B) ou visitez le www.ursupport.com pour une recherche par modèle.

B. RECHERCHE DE CODE

- Appuyez et tenez la touche SET UP jusqu'à ce qu'elle clignote deux fois.
- Appuyez sur la touche pour l'appareil que vous désirez configurer (TV, DVD ou AUX). La touche restera allumée.
- Appuyez et tenez la touche SELECT.
- Relâchez la touche SELECT quand votre appareil s'éteint.

C. CONTRÔLE DU VOLUME

Les commandes du volume contrôleront votre récepteur Bell Télé Fibe. Si vous préférez qu'elles contrôlent votre téléviseur ou un autre appareil, suivez les étapes ci-dessous:

- Appuyez et tenez la touche SET UP jusqu'à ce qu'elle clignote deux fois.
- Appuyez sur la touche de VOLUME +.
- Appuyez sur la touche (Bell, TV, DVD ou AUX) qui correspond à l'appareil que vous utilisez pour contrôler le volume. Notez que cette touche doit déjà être programmée pour contrôler votre appareil.

D. DÉPANNAGE

Problème : La touche de mode ne clignote pas quand une touche est appuyée.
Solution : Remplacez les piles.

Problème : La touche de mode clignote, mais la télécommande ne contrôle pas mon équipement.
Solution : Appuyez sur la bonne touche et pointez la télécommande vers l'équipement que vous désirez contrôler.

BATTERY INSTALLATION

- Remove cover on back.
- Insert 2 new AA alkaline batteries.

PROGRAMMING THE REMOTE TO CONTROL OTHER DEVICES.

The remote will only control a device that has been selected by the appropriate mode key (TV, DVD, and AUX).

PROGRAMMING THE REMOTE TO CONTROL OTHER DEVICES.

You do not need to program the remote to operate your Bell Fibe TV receiver.

To use your remote for other devices, you will need to setup the TV, DVD and AUX mode keys to control the devices (Section A).

Refer to the code list on the back of this guide for a list of supported brands and models. If you do not find the brand of your device, refer to section B for the search function.

NOTE The TV mode key can only be setup with TV codes. The DVD key can only be setup with DVD, Blu-Ray and VCR codes. The AUX key can only be setup with Audio codes.

A. SETUP TV, DVD AND AUDIO DEVICE CONTROL USING DIRECT CODE ENTRY

- Turn on the device you want to control.
- To set up the remote to control a TV, first press the TV mode key, then press the SET UP key until the mode key blinks twice. For a DVD player or audio device, press and hold the DVD or AUX mode key for the device you want to setup, then press and hold the SET UP key until the DVD or AUX mode key blinks twice.
- From the list of codes on the reverse side, locate the code for your brand and enter the first code.
- Press the power button; if the device turns off, setup is complete.
- If the device does not turn off, repeat the process using the next code listed for your device brand.

B. CODE SEARCH

- Press and hold SET UP until the mode key blinks twice.
- Press the mode key (TV, DVD or AUX) that you want to set up. The mode key will stay lit.
- Press and hold down the SELECT key.
- Let go of the SELECT key when your device turns off.

C. VOLUME CONTROL

The volume controls will control your Bell Fibe TV receiver. If you would prefer they control your TV or another device, please follow these steps:

- Press and hold SET UP until the mode key blinks twice.
- Press VOLUME + key.
- Press the mode key (Bell, TV, DVD, AUX) that corresponds to the device you want to control the volume of. Please note that this mode key must already be programmed to control your device.

D. TROUBLESHOOTING

Problem: Mode key does not blink when a key is pressed.
Solution: Replace batteries.

Problem: Mode key blinks, but remote does not control my equipment.
Solution: Press correct mode key and point the remote at the equipment you would like to control.

Problem: You have tried all codes for your brand of device and none work.
Solution: Try CODE SEARCH (Section B) method or go to www.ursupport.com for model-based search.

Problem: The mode key flashes five times every time I press a key, but everything works normally.
Solution: The batteries in the remote are weak; please replace them with two new AA batteries.

LISTE DES CODES CODE LIST

Electrohome	0463-1670-1672
Elektra	0017-1661
Element	1687-1886-2183
Emerson	1864-0154-0451-0236 0463-0180-0178-0171 1661-0623-1391-1665 1886-1944-1963-1977
Emprex	1422-1765
Encross	0876
Envision	0030-0813-1365-1589 2014-2087-2402-2479
Epson	1122
ESA	0812-0171-1944-1963
Firstline	0037
Fisher	0154-1362
Fluid	2964
Fujimaro	1687
Fujitsu	0809-0683-0853
Fujitsu Siemens	0809
Funai	0000-0180-0171-1271 1904-1963-1979
Futrestech	0180
Gateway	1755-1756
GE	1547-1447-0047-0051-0451 0765-0178-1347-1922-2359
General Electric	0047
GFM	1864-0171-1665-1886-1963
Gibraltar	0017-0030
Global Home	1565
Go Video	0060-0030-0056
GoldStar	0178-0030-0037-0056
Gradiente	0053-0056
Grundig	0037-0070-0672-0683
Grunpsj	0180
H & B	1366
Haier	1034-1748-1749-1753 2293-2309-2494-3204
Hallmark	0178
Hanns G	1783
Hanspree	1348-1745-1783-2786
Harley Davidson	1904
Harman/Kardon	0054
Harvard	0180
Havermy	0093
Helios	0865
hello Kitty	0451
Hewlett Packard	1494-2540
Himitsu	0180
Hisense	0748-1314-1660-2098 2355-2497
Hitachi	1643-1145-0145-0056 0679-0797-1345-1445 1904-2215-2431-2433
Hitec	1814
HP	1494-2540
H-Jnc	1814
Hjundai	0849-1219-1814
I-Inc	1665-1684-1990
Ilo	1463-1286-1394-1603 1665-1684-1990
In nity	0054
Initial	1603-1990
Innova	0037
Insignia	1423-1564-0463-0171-2751 2438-2184-2088-2049-2002 1963-1892-1810-1785-1640 1641-1517-1385-1326-1204
Inteq	0017
IRT	0451-1661
ITT Nokia	0180
IX	0877
JBL	0054
JCB	0000
JCM	2256
Jensen	0761-1299-1326-1933
JVC	0463-0053-0650-0731-1253 1601-1774-1923-2264-2271
KDS	1687
KEC	0180
Ken Brown	0236-0463-1321
Keno	0030-0082
Kenwood	0030
Kioto	0054
KLH	0765-0092-1661
Koniko	1385
Kost	1262-1483
Kresien	0876
Prism	1785-1933
KTV	0180-0030

LG	1423-1447-0017-0126-0178-0030 2834-2731-2424-2359-2358-2182 1993-1860-1859-1768-1721-1325 1178-0856-0056
Lloyd's	1904
Loewe	0087
Luxman	0056
LXI	0047-0054-0154-0156-0178
Lynx	1565
M&S	0054-0236
MAG	1687
Magnavox	1454-1866-1755-0054-0051 0030-0171-2372-1990-1963 1944-1904-1867-1525-1455 1365-1254-1198-0802
Marantz	1454-0054-0030-0037 0704-0855-1398-1714
Matsumita	0250-0650
Maxent	1755-0762-1211-1714-1757
Magatron	0178-0145
Memorex	0154-0463-0150-0178-0877 1665-1670-1785-1892-1924 1927-1938
MGA	0150-0178-0030
Midland	0047-0017-0051
Mintek	1603-1990
Mitsubishi	1250-0093-0050-0178 0836-1977
Mnvision	0843
Motorola	0017-0030
MTC	0060-0030-0056
GoldStar	0178-0030-0037-0056
Gradiente	0053-0056
Grundig	0037-0070-0672-0683
Grunpsj	0180
H & B	1366
Haier	1034-1748-1749-1753 2293-2309-2494-3204
Hallmark	0178
Hanns G	1783
Hanspree	1348-1745-1783-2786
Harley Davidson	1904
Harman/Kardon	0054
Harvard	0180
Havermy	0093
Helios	0865
hello Kitty	0451
Hewlett Packard	1494-2540
Himitsu	0180
Hisense	0748-1314-1660-2098 2355-2497
Hitachi	1643-1145-0145-0056 0679-0797-1345-1445 1904-2215-2431-2433
Hitec	1814
HP	1494-2540
H-Jnc	1814
Hjundai	0849-1219-1814
I-Inc	1665-1684-1990
Ilo	1463-1286-1394-1603 1665-1684-1990
In nity	0054
Initial	1603-1990
Innova	0037
Insignia	1423-1564-0463-0171-2751 2438-2184-2088-2049-2002 1963-1892-1810-1785-1640 1641-1517-1385-1326-1204
Inteq	0017
IRT	0451-1661
ITT Nokia	0180
IX	0877
JBL	0054
JCB	0000
JCM	2256
Jensen	0761-1299-1326-1933
JVC	0463-0053-0650-0731-1253 1601-1774-1923-2264-2271
KDS	1687
KEC	0180
Ken Brown	0236-0463-1321
Keno	0030-0082
Kenwood	0030
Kioto	0054
KLH	0765-0092-1661
Koniko	1385
Kost	1262-1483
Kresien	0876
Prism	1785-1933
KTV	0180-0030

Pulsar	0017
Punktal	2687
Pye	0412
Pyle	1200
Quosar	0250-0051-0650-1291 1924-1927
RadioShack	0047-0154-0180-0178 0030-0056-1904
RCA	1547-1447-0047-0051-0093 0060-1661-2932-2746-2434 2247-2187-2002-1959-1958 1953-1922-1178-1347-1147-0679
Realistic	0154-0180-0178-0030-0056 0866-1147-1136-1347
RevolutionHD	1623
Runco	0017-0030-1398
Sampo	1755-0030-0762
Samsung	0812-0060-0702-0178 0030-2014-2617-2590-2137 2103-2051-1959-1060-0814 0766-0650-0056-0037
Sansei	0451-0092
Sansui	0463-0171-1463-1409 1670-1892-1904-1935-1938
Sanyo	0054-0154-1142-1162 2337-2506
Sceptre	0878-1271-1360-1599
Scotch	0178
Scott	0236-0180-0178-1771
Scots	0047-0054-0154-0156
Sears	0178-0171-0056-1007-1904
Semivox	0236-0463-0180
Semp	0156-1356-1743
Sense	1687
Serie Dorado	0156-0180-0178 0030-0056
Sharp	0818-0093-1459-1602 1659-2360-2402-2495
Sheng Chia	0093
Sherwood	1399
Siam	0037
Signature	0054
Signet	1262
SKY	1999
Colby	1389-2127
Curtis	1389
Daewoo	1250
Denon	2706-2857-1350-1460 2427-2279-2516-2820 2987-3001-2502
Soundesign	0180-0178
Sova	1952
Soyo	1746-1824
Space Tek	1696
NuVision	2157
Olevia	1610-1144-1240-1331
Omwo	0180
Optimus	0250-0154-0166-0650 0124-1927
Optima	1348
Optonica	0093
Orion	0236-0463-1463-1938
Otic	1687
Packard Bell	0000
Panasonic	1480-0250-0051-0650 1271-1291-1345-1924-1927 1941-1946-1947-2240-2264
Panovox	0861
PARK	2104
Penney	0047-0156-0051-0060 0178-0030-1347
Petters	1523
Phileo	0054-0451-0483-0030 0145-0171-0092-1661-0082 1271-1394-1665-1963
Philips	1454-1866-0054-0171-0037 0690-1394-1455-1483-1744 1806-1867-1961-2372-2374-2564
Pilot	0702-0056
Pioneer	1457-0166-0679-0866-1260 1398-2240
Planar	1288-1589
Polaroid	1523-0765-2425-2121-2117 2063-2002-1992-1769-1767 1766-1763-1762-1687-1565
Remo	0030-0082
Kenwood	0030
Kioto	0054
KLH	0765-0092-1661
Koniko	1385
Kost	1262-1483
Kresien	0876
Prism	1785-1933
Proscan	1447-0047-0030-1347 1922-2147-2183-2256
Protan	0178
Proview	0087

Viewsonic	1755-1564-0797-0857 0864-0885-1330-1365-1578 1627-1640-1742-2014-2049 2087-2277
Viore	1207-1684-1811-2104-2352-3136
Visor	1336
Vizio	1758-0864-0885-1756 2912-2757
Wards	0000-0047-0054-0107 0154-0156-0051-0800 0060-0178-0030-0056
Sherwood Newcastle	2169
Sonic Blue	1869
Sony	1759-1058-1441-1258-1622 1558-1658-1758-1822-1858 2172-2227-2475-2522-2610
Stereophonics	1023
Sun_re	1328
Teac	1390-1532
Technics	1308-1518-1633
Thorens	1189
Toshiba	1788
Venturer	1390
Xion	1992
Yamaha	0030-3077
Zenith	0000-1423-0047-0017 0463-1265-0178-0030 1454-0145-0092-1661 1325-1365-0037-1721 1859-1904-2358

Appareils audio / Audio

Aiwa	1405-0189-1388-1641
Alco	1390
Altec Lansing	2720
AMC	1077
Anam	1609
Apex Digital	1257-1430-1774
Apple	1115
Arcam	1189-0189
Audironic	1189
Audiowax	1390
Bose	1629-1930
Carver	1189-0189
Colby	1389-2127
Curtis	1389
Daewoo	1250
Denon	2706-2857-1350-1460 2427-2279-2516-2820 2987-3001-2502
Dynex	2971
Fisher	1801
Gateway	1517
Harman/Kardon	0892-3045-0110-0189 1304-1306-2241-2443
Hitachi	1801
HirPlus	2483
iHome	2435
iLive	2013
Insignia	1030-1077-1751-1893-2126 2169-2175-2472-2929-2946
Inteq	1298-1320-1805
iSymphony	2442
JBL	0110-1306-2241
JVC	1374-1495-1871-2040-2239 2331-2969
Kenwood	1313-1569
KLH	1390-1428
Koss	1366-1497
Left Coast	0876
LG	1293-2197-2284-2672
Linn	0189